


ALC


How to Setup an ALC SightHD Wi-Fi Camera

iPhone/iPad


Wireless
Made
Simple.

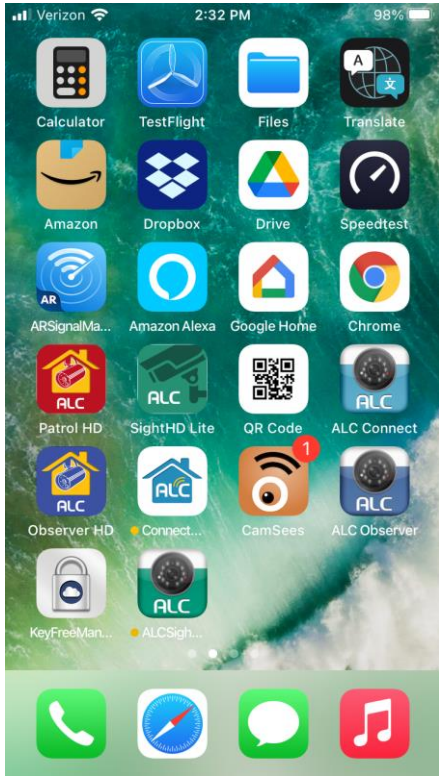


1) Ensure your phone/tablet is connected to your Wi-Fi network. Download and install the ALC SightHD App to your phone/tablet

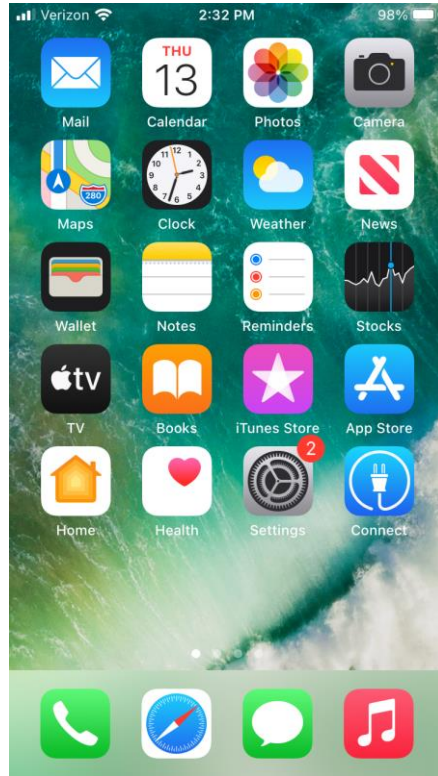


2) Ensure the ALC Camera is plugged in and the LED is blinking 3 times. Go to your phones Settings and select Wi-Fi.

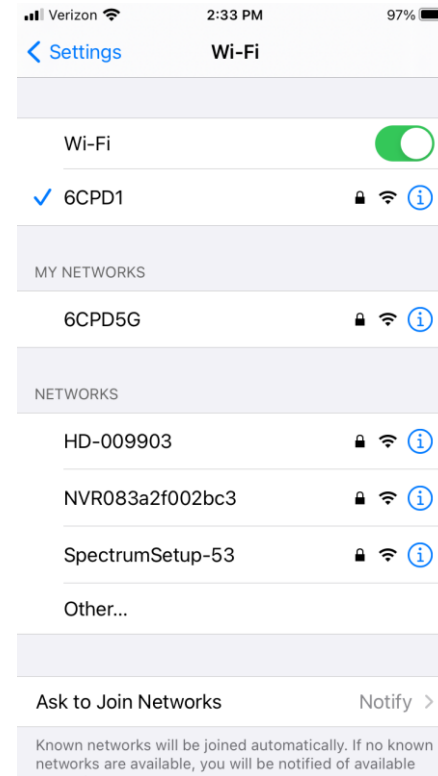


3) Select the network HD-xxxxxx. This will be different for each camera. Enter 12345678 as the password.

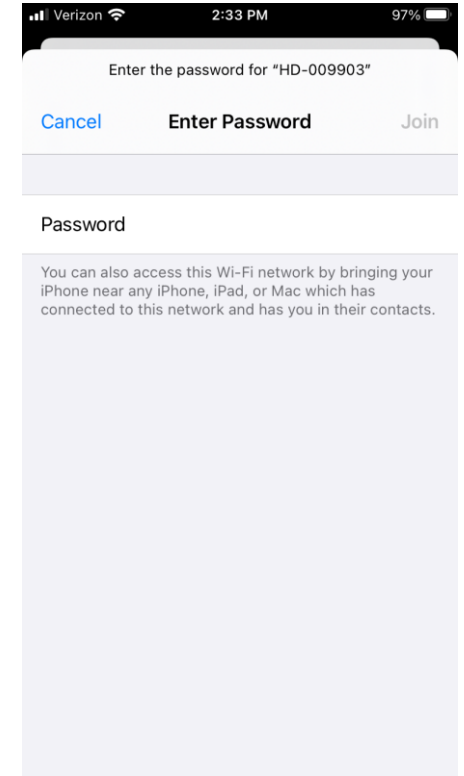


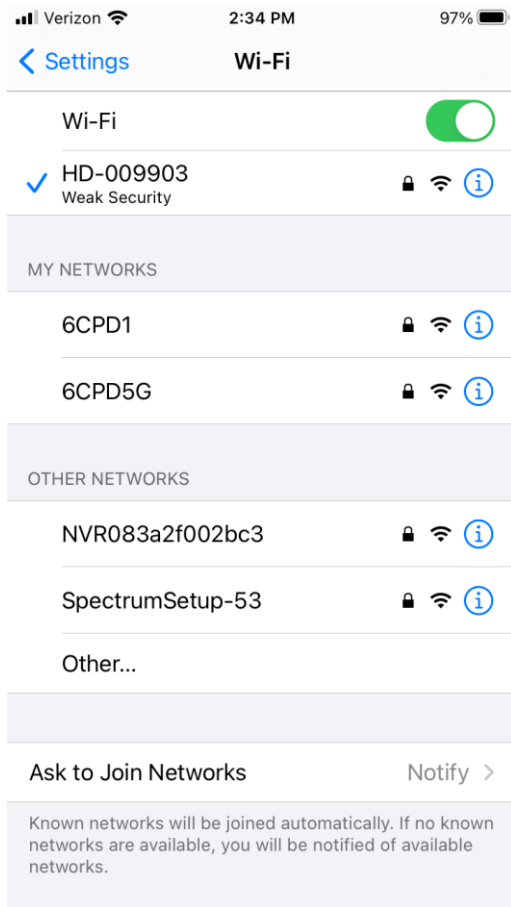


4) Your phone will connect to this network which is actually the Camera

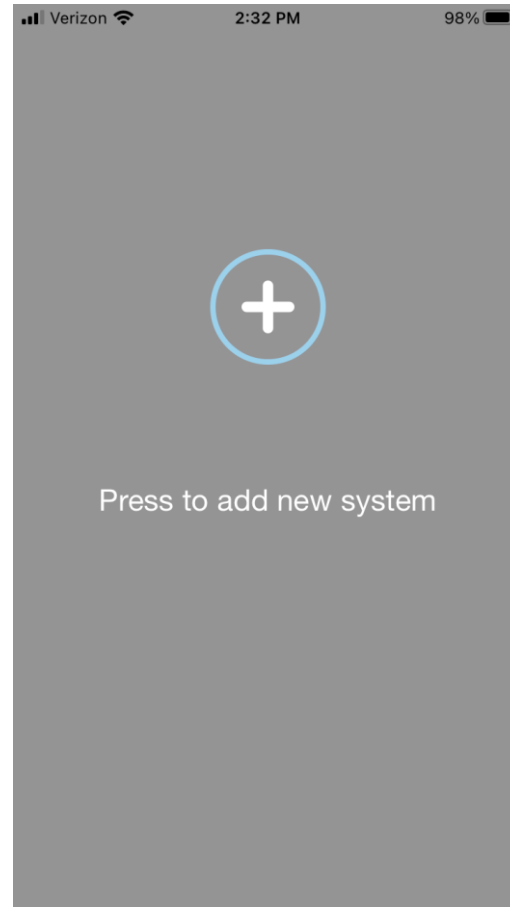


5) Launch the ALC SightHD app and select add a new system. Select Wi-Fi Cameras.

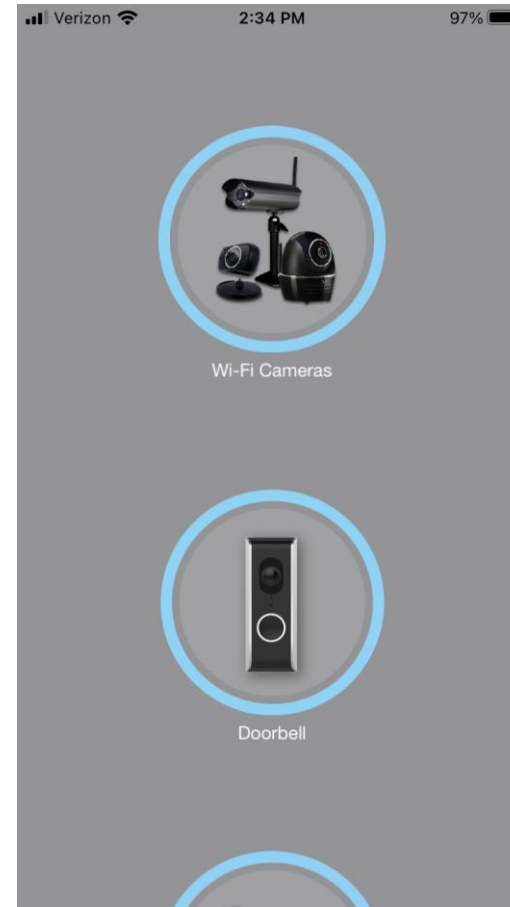


6) The app will connect to the camera

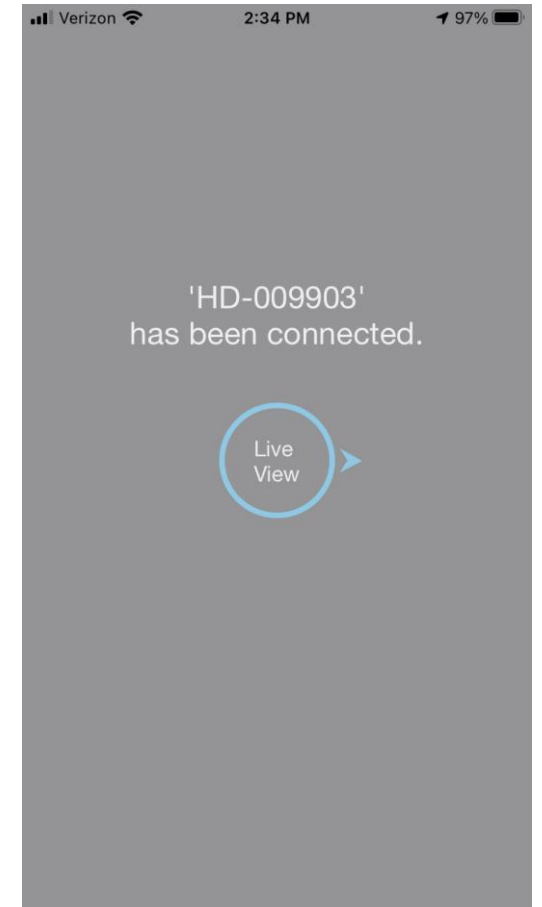


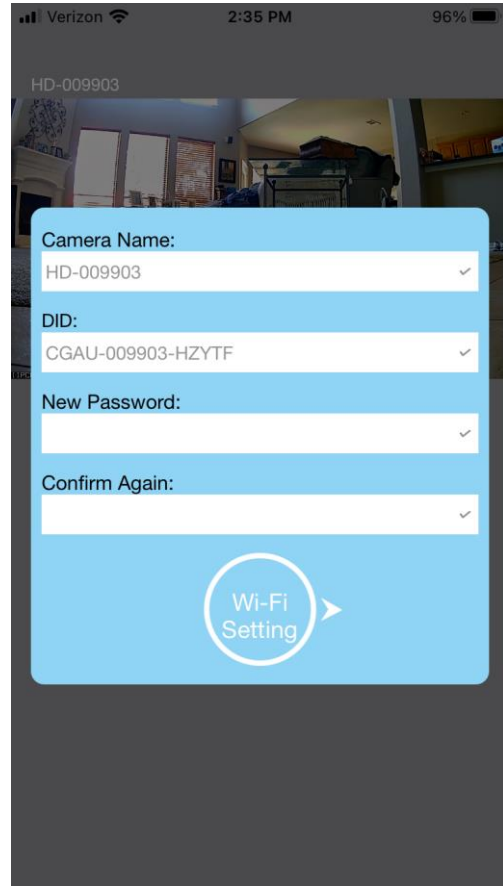


7) Create your own Password/Security Code and Confirm (must remember what this is)

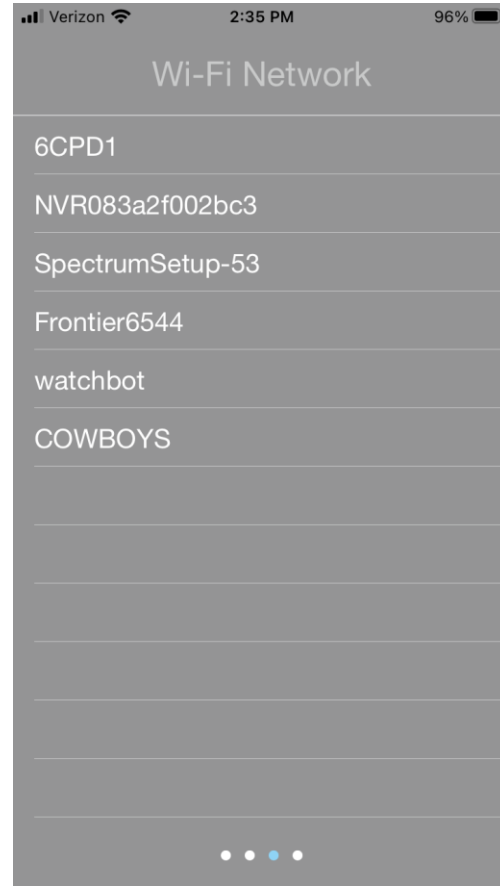


8) Select your Wi-Fi network (requires 2.4GHz Wi-Fi)

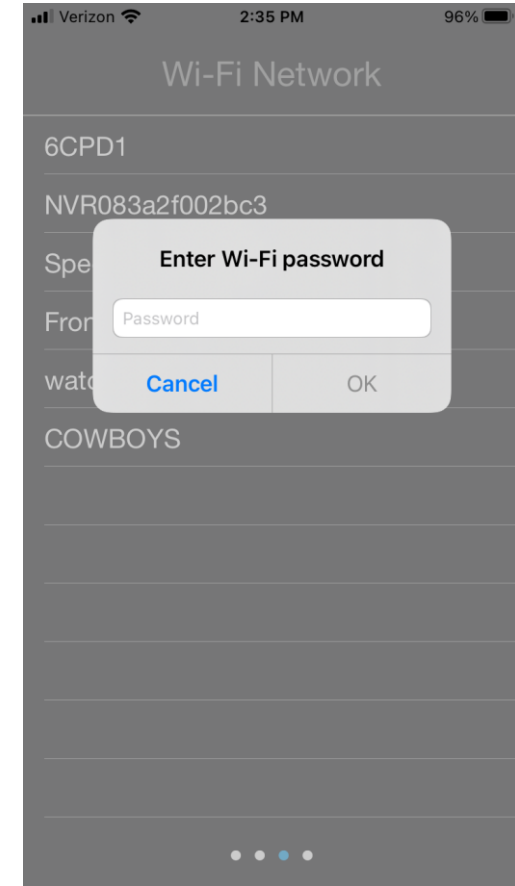

9) Type in your Wi-Fi password

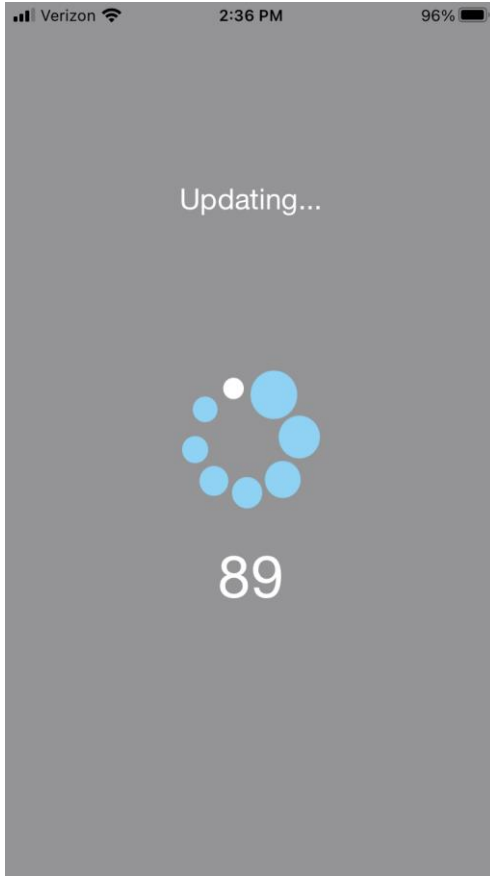

10) The phone/tablet will send the information over to the camera and the camera will reboot during this 100 second countdown and connect to the Wi-Fi network

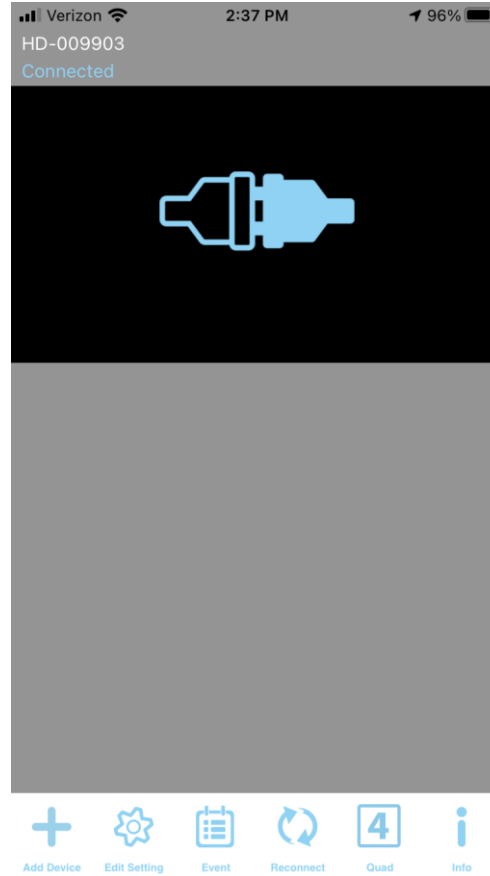

11) After countdown is complete, the camera will be connected

